




## Product Specs

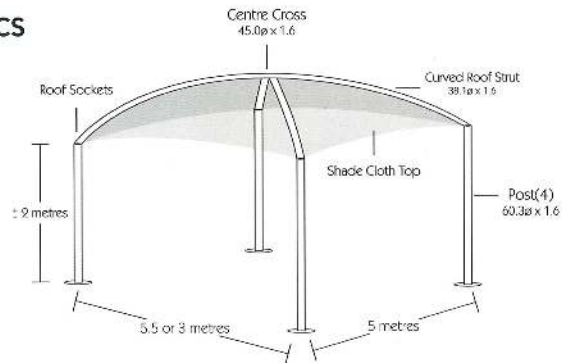

## Component List




1x Centre Cross




4x Roof Struts



4x Posts  
(2280mm x 60.3mm diameter)

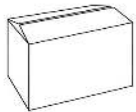

12x Fixings

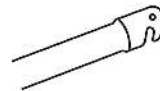

4x Roof Sockets  
(with 4x nuts, 4x bolts & 8x Tek screws)

## Instructions

**Tools Required:** 16mm socket & ring spanner, Hammer drill with 12mm concrete drill bit and a 8m measuring tape

1. Lay out shade cloth and mark position where posts are to be erected.
2. NB: TO ENSURE THE STRUCTURE IS SQUARE, DIAGONAL MEASUREMENT OF SHADECLOTHS FROM CORNER TO CORNER MUST BE EQUAL. (See Fig.1)

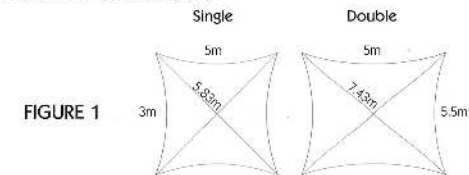


FIGURE 1

3. Mark the four corners to erect the posts. Mark the holes for drilling, (minimum slab thickness 100mm). See instructions on Chemical Anchor Box.
4. Fit 4 posts
5. Put tops into posts and connect two roof struts
6. Connect centre cross and connect remaining roof struts.
7. Hook up shade cloth
8. Put "Tek" screws into top of posts to secure roof inserts.

**CONGRATULATIONS  
YOU HAVE SUCCESSFULLY INSTALLED YOUR  
ZELANGA SHADE**